Video Set – Used to set the Brightness, Contrast, and Color Saturation of the screen to the desired level based on your lighting conditions.

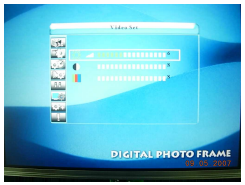

Default Set and Version – These are used to commit default changes and display the version control of the unit.

Specifications

Function	Specification
Screen Size	10.4”
Resolution	800x600
AC Input Power	100-240VAC, 50/60Hz
DC Unit Power	12VDC@1.5A
Built-in Speakers	Stereo
Images	JPG
Audio	MP3
Video	MPEG
Card Reader	CF/MMC/SD/XD/MS
USB to PC	Yes
USB to Device	Yes
Internal Memory	Yes
Remote Control	Yes

Digital Spectrum
Incorporated

Digital Spectrum, Inc.
17811 Mitchell North
Irvine, Ca. 92614
www.dsicentral.com
1862-M0-P1-6

MemoryVue™

Digital Spectrum
Incorporated

MemoryVue 1040 Plus

User Manual

Congratulations! You are the proud owner of a MemoryVue[tm] Digital Frame. Boasting high-quality image resolution the MemoryVue[tm] is the perfect product for displaying your favorite digital photos. With its ease of use and configuration, you can now display all your favorite pictures, even with background music, or video clips for everyone to see!

Package Contents

Before using the MemoryVue[tm], be sure to check all the accessories contained in the package. MemoryVue[tm] comes with the following items:

1. MemoryVue[tm] unit with removable desktop stand
2. A.C. Power Adapter
3. USB Cable
4. User Manual

Features

- ✓ High resolution 10.4" TFT display
- ✓ Plays images in slideshow format
- ✓ Plays MP3 audio
- ✓ Plays MPEG Video
- ✓ Plays Audio Slideshow
- ✓ Built-in multi format card reader CF/MMC/SD/XD
- ✓ Generous 256MB internal memory
- ✓ USB Port for PC connection
- ✓ USB Port for device connection – thumb drive, camera, etc.

Connections

Use the guide below for power connection and media insertion.

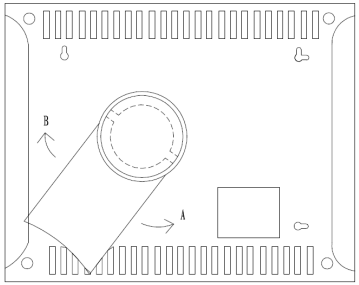

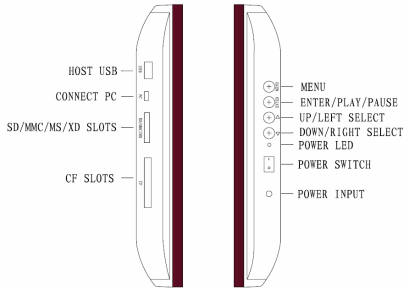

1. Plug one end of the AC Adapter into the Digital Photo Frame and plug the other end into a standard AC electrical outlet.
2. Insert a memory card into the appropriate slot.
3. Slide the Power Switch to the ON position.
4. A slideshow will automatically play from the inserted media. If there is no media, the unit will play from the internal memory*.

* First time users may be asked by the unit to set the date and time.

Setup

This function is used to setup operational parameters for personalization. Functions include Language, Slideshow management, Clock settings, Alarm settings, Startup control settings, Video Settings, Default settings. Use the Up/Down buttons to the desired control and use the **Enter** button to select. A second screen is displayed with the controls. Use the navigation buttons to the desired control. The **Enter** button will select the desired parameter.

Language – Once in "Language use the navigation buttons to select the desired language.

Picture Set – Once in "Picture Set" use the navigation buttons to select either "Slideshow Mode" (Display Rate) or "Picture Play" Mode (Transitions).

Clock/Alarm Set – Once in either mode use the navigation buttons to change the times as desired.

Start Up Set – Used to select the Startup Mode. When "Mode Select" is selected, the Main Menu is displayed at Power On. When any other function is selected, external media is played first. If no external media, plays from internal memory.

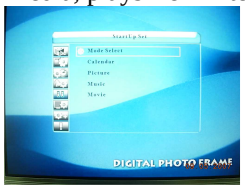

Movie

This is the function used to play a movie clip. On the Main Menu select Movie and **Enter**. On the second screen select the media (the media named **"MEMORY/NAND"** is internal memory). Press the Enter button to activate the media. The third screen shows the name of the clips on the selected media. Press the Enter button to Play. The clip will begin to play. Press the Play/Pause button to pause the clip. A screen will temporarily appear over the clip confirming the clip was paused along with the pause time; same when play resumes. Press the **Menu** button to end and return to the Main Menu.

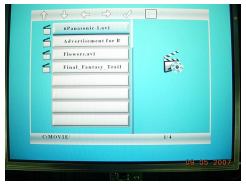

Text

This is the function used to play text files (.txt). These are files which are readable in ASCII format. On the Main Menu select Text and Enter. On the second screen select the media (the media named **"MEMORY/NAND"** is internal memory). Press the **Enter** button to activate the media. The third screen shows the name of each text file on the selected media. Press the **Enter** button to Play. The will show the text information on the screen Use the Up and Down buttons to navigate through lines, and the right and left arrow buttons to navigate through pages. Press the **Menu** button to end and return to the Main Menu.

Edit

This is the function used to **Copy/Delete** files from external memory to internal memory as follows: Go to the Main menu.

1. Select EDIT, press ENTER.
2. Select the media which you want to copy from, and then press ENTER. Use UP or Down arrows to navigate thru your files.
3. Select the files you want to copy by pressing the Right arrow. (Marked by a paw)
4. Press the Left arrow to return to the Media menu.
5. Highlight the device the images are to be copied to and press Enter.
6. Press the Copy/Del button, select the copy option (briefcase) and press Enter
7. You should then see a message saying "Finished!" Press Enter once you see this message.

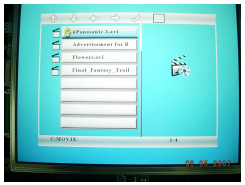

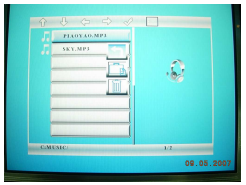

MemoryVue™

Changing the Frame

MemoryVue[tm] supports changeable frames so you can change the look of the frame as the décor changes. Use the following instructions to change the frame:

1. Lay the digital frame on a flat surface with the screen facing down. Make sure the surface is flat and protected to avoid scratches.
2. Using a #6 Philips head screwdriver and the illustration below, remove the 4 screws that fasten the frame to the unit. Lift the digital frame unit up, turn it over, and lay it down in another area. The frame should be left on the protected surface. Note the location hole in the matte.
3. Lift the removed frame form the surface. Replace this frame with the new frame, making sure the orientation of the hole in the new frame is the same as the other.
4. Lift the digital frame unit up, turn it back over, and place it over the frame, aligning the mounting holes, and making sure the optical sensor on the unit and the hole on the matte are aligned.
5. Use the four screws that were removed to fasten the new frame. The unit is now ready for display.

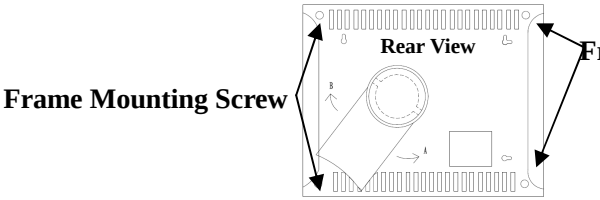

.

Connecting to the USB Ports

The MemoryVue 1040 Plus has both a USB Port for connection to a PC and a Port for connection to other devices such as thumb drive, USB card reader, and camera. When connected to the PC you can drag-n-drop content to internal memory using PC exploring tools to locate the unit, and will appear as additional drive letters, including internal and external memory. You can also delete content from internal memory. The other USB port supports devices such as thumb drives, card readers, cameras, etc.

On Screen Menu

The Main Menu contains the major functions for control. Use the navigation buttons on the remote control to locate the desired function. Use the Enter button to select. A second screen is presented for media control (the media named **"MEMOY/NAND"** is internal memory). A third screen may be presented to view and select the media content.

MemoryVue™

Remote Control

The remote control is used to conveniently manage the media and content to be played. The layout is designed for maximum ease of use, and because the menu functions all operate in a similar manner navigation is quick and easy to learn.

Button	Function
Power	On/Off Control
Mute	Mute On/Off Audio
Photo	Play Images
Music	Play MP3 Track
Movie	Play Video Track
Text	Play Text File
Combo	Play Slideshow and Audio
Edit	Enter Edit Mode
Setup	Setup operational parameters
Calendar	Calendar Display
Esc	Previous Command
Menu	Main Menu
View	Thumbnail View
Back Music	Activate background music
Up, Down, Left Right	Shift direction
Enter	Select/Save
Vol +/-	Volume Up/Down
Zoom	Zoom by 20%
Rotate	Rotate image by 90^0
Rev/Fwd/Play	Reverse/Forward/Play Video
Copy/Del	Copy/Delete
Prev/Next	Previous/Next image

On Screen Navigation

Use the arrow buttons to navigate to the desired function. The selected function is highlighted from the rest of the functions. Press **Enter** to select. A second screen will appear to select the media. Use the arrow buttons to navigate to the desired media; the selected media is highlighted. Press the **Enter** button to activate. A third screen will appear with the name of each image or clip. Press the **Enter** button to Play.

Photo/Picture

This is the function used to play a slideshow. On the Main Menu select Photo and **Enter**. On the second screen select the media (the media named **"MEMORY/NAND"** is internal memory). Press the Enter button to activate the media. The third screen shows the name of the images on the selected media. Press the Enter button to Play. The slideshow will begin to play beginning with the selected image. Press the Enter button to change to Manual Mode, were each image is played by manual control using the arrow buttons. Press the **Menu** button to end and return to the Main Menu. Use the Zoom button to zoom in by 20% each press.

Music

This is the function used to play a MP3 audio file. On the Main Menu select Music and **Enter**. On the second screen select the media (the media named **"MEMORY/NAND"** is internal memory). Press the Enter button to activate the media. The third screen shows the name of the MP3 files on the selected media. Press the Enter button to Play. The MP3 file will begin to play. Press the Enter button to pause the clip. A control screen will appear identifying the file information and controls while playing as noted below. Use the arrow buttons to navigate through the desired controls. Press the **Menu** button to end and return to the Main Menu.

Combo

This is the function used to play an audio slideshow. The requirement is that there is an MP3 file on the media with the images. In this manner MP3 audio will be played in the background while a slideshow is playing. On the Main Menu select Combo and **Enter**. On the second screen select the media (the media named **"MEMORY/NAND"** is internal memory). Press the Enter button to activate the media. The third screen shows the name of the image and MP3 files on the selected media. Press the Enter button to Play. The slideshow will begin to play along with the selected audio track. Press the Enter button to pause the slideshow. The audio will continue to play. Press the **Menu** button to end and return to the Main Menu.